


User Guide

LIFT CONTROLLED BY GROOMY, ref. 182 076

What's in the box:



1 motor,
Gear and toothed rack,
2 Groomy® switch, ref. 181 120,
3 Groomy® push button, ref. 181 126,
1 Groomy® motor controller, ref. 181 139,
2 Groomy® reed switch, ref. 181 121,
1 sets of Groomy® leads, ref. 283 124,
1 set of lead markers, ref. 315 348,
1 lift model.

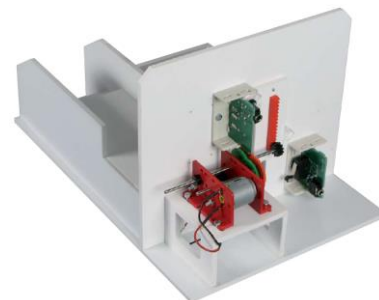


What you will need (not included):

Double-sided tape, ref. 183 466,
Groomy® interface, ref. 181 000,
Groomy® SysML software.

The motor, the 2 Groomy® switches, the 2 Groomy® reed switches and the 3 Groomy® push buttons are already installed onto the model, as shown below.

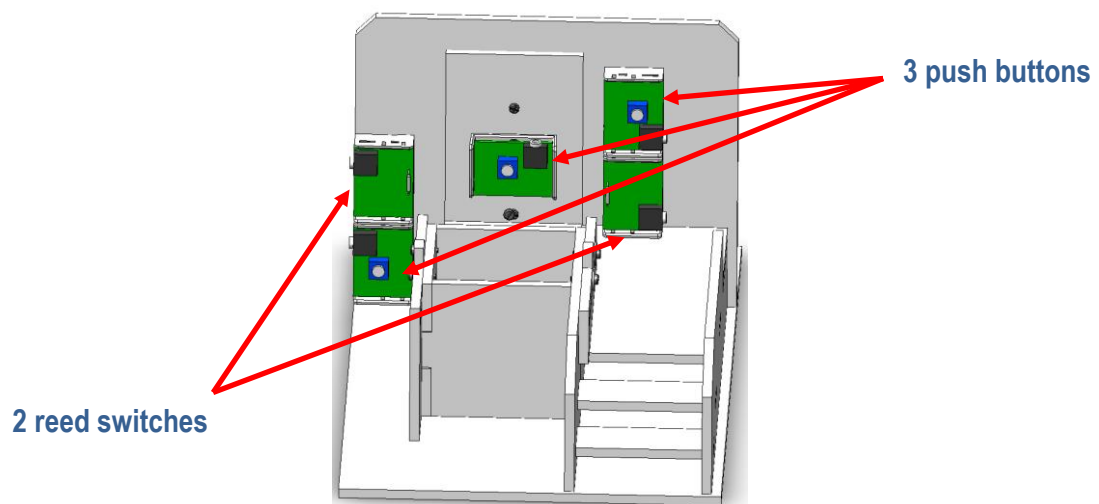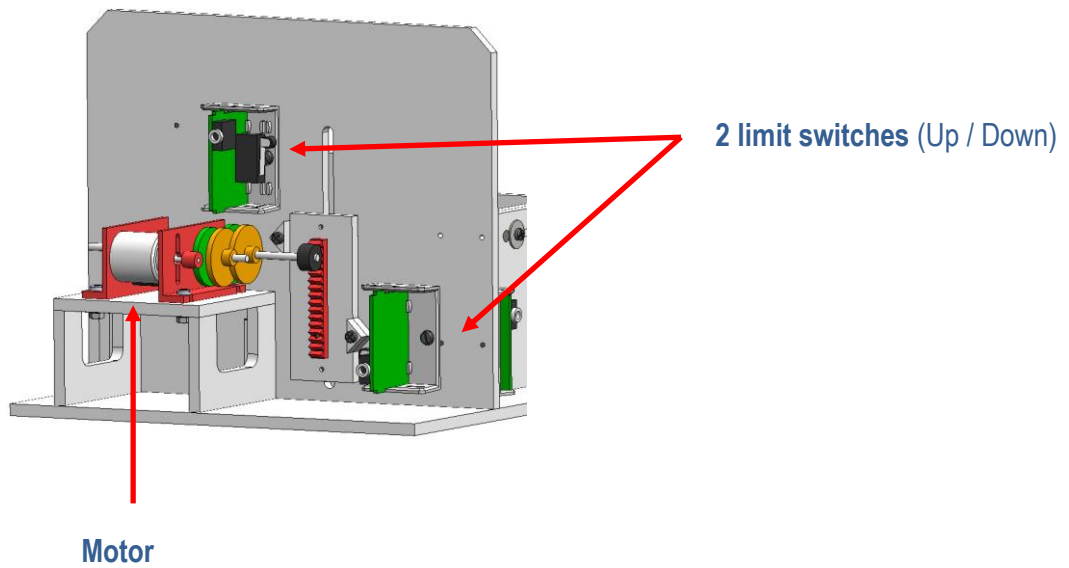

Sensors / Actuators assignment on Groomy® interface:

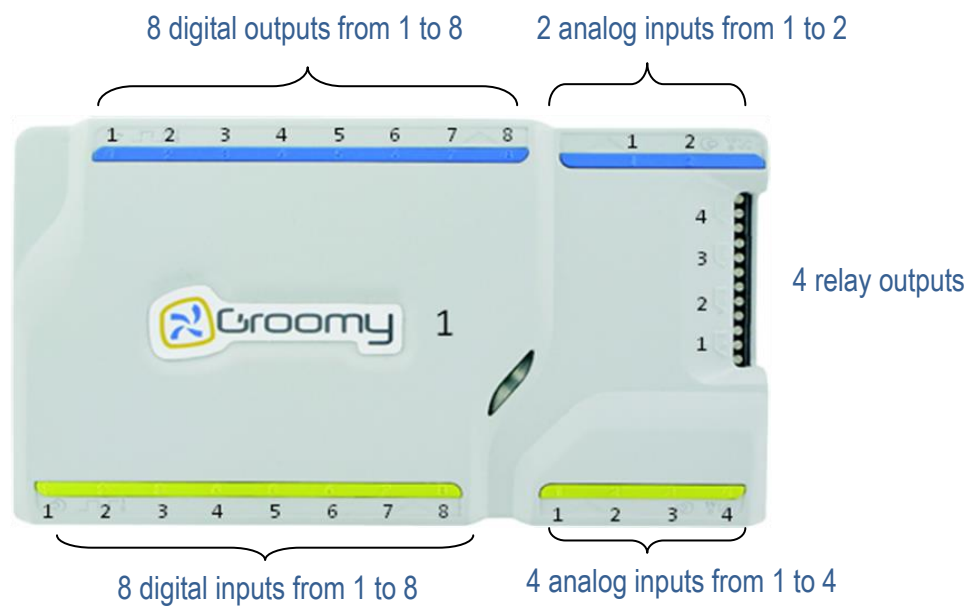

Thanks to foolproof Groomy® leads, connect sensors / actuators to the interface as below:

Digital inputs	
	3 push buttons , ref. 181 126, Digital inputs 1, 2, 3.
	2 reed switches , ref. 181 121, Digital inputs 4, 5.
	2 switches , ref. 181 120, Digital inputs 6, 7.

Relay outputs

